

NiCHOICE
美肌エフェクター
取扱説明書・保証書
NBT-910

このたびは当社製品をお買い上げいただき、まことにありがとうございます。


ご使用前にこの取扱説明書をよくお読みいただき、正しく安全にご使用ください。

本取扱説明書を大切に保管してください。

使用前のご注意

1. 本製品はヘッドの振動で、肌の気になるポイントを集中的にケアします。
2. ニキビが出た場合は、本製品を使用しないでください。
3. 自身より、肌に負荷を掛けないように使用回数並び時間をご調整ください。
4. ヘッドをきちんと洗浄したうえ、ご使用ください。
5. 細菌が増えるため、使用後に必ず本製品を洗浄してください。
6. リチウム電池を含めているため、高温になる場所で本品を使用したり放置したりしないでください。
7. 長時間に使用しない限り、通風場所に置いてください。

各部の名前

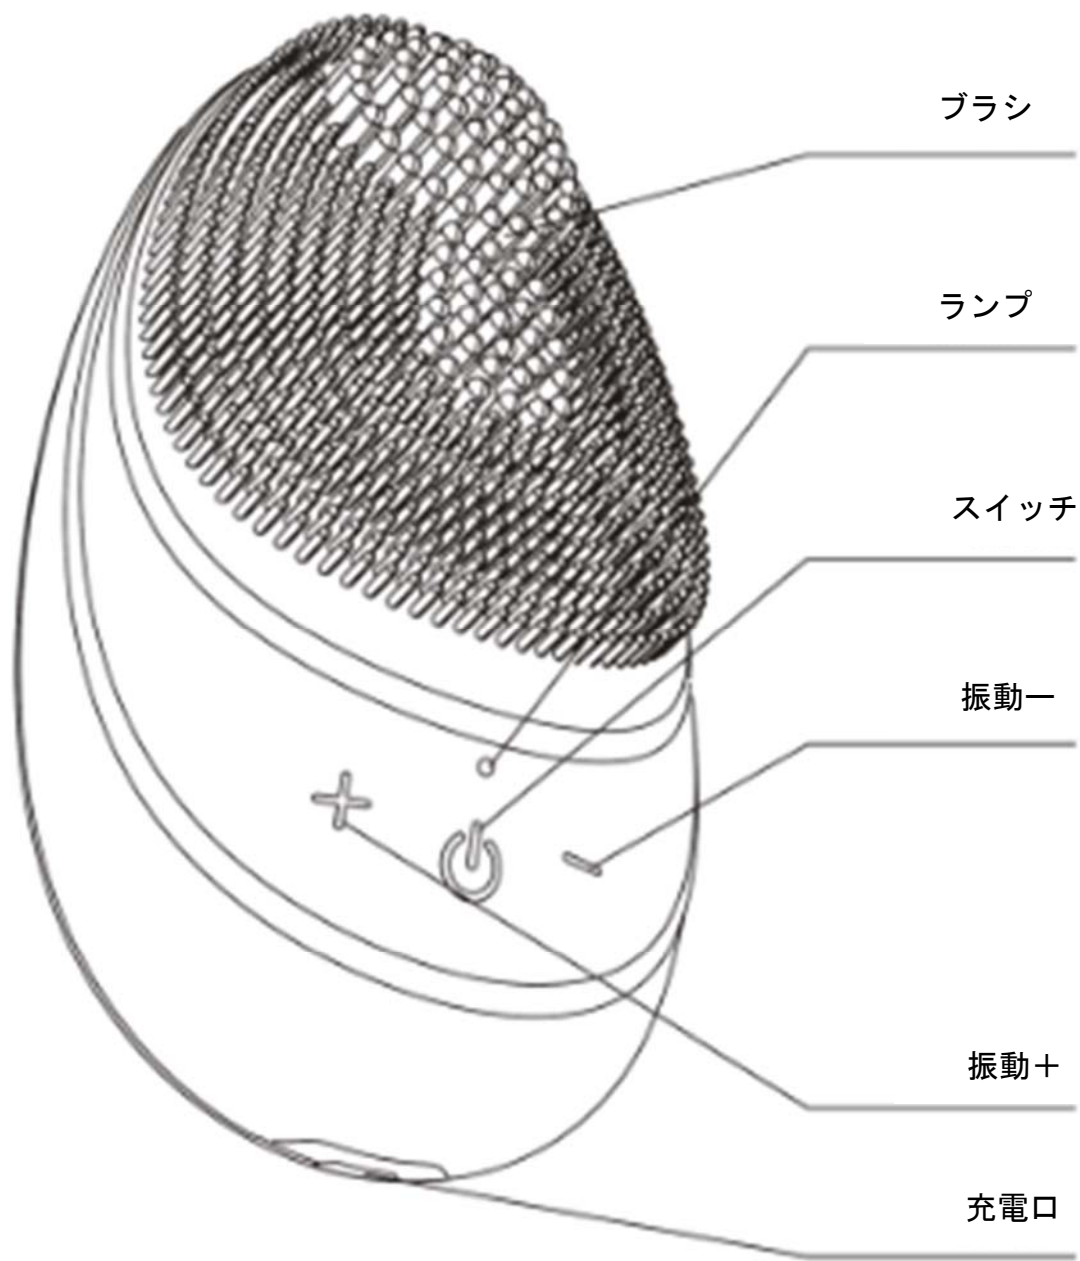

使い方

1. スイッチボタンを一回押すと、白い色の LED ランプが点灯、振動が始まります。

作業中に一回押すと電源を切り、作業中止になります。

* 充電の状態で使用不可となりますので、ご注意ください。

2. 振動＋：振動率は 10 段調整可能です。このボタンを押して、振動が強くなります。

振動－：振動率は 10 段調整可能です。このボタンを押して、振動が弱くなります。

3. 充電 AC アダプタ、パソコンなどと USB ケーブルで充電、充電中には赤色の LED ランプが点灯、充電が終わったら青の LED ランプが点灯します。

4. 使用始めるとき、電量は足りませんので、充電後にご利用ください。

充電方法

AC アダプタ、パソコンなどと USB ケーブルで充電、充電中には液晶画面に現在の状態が表示されています。

使用始めるとき、電量が足りないですから、充電後にご使用してください。

製品仕様

モーター	3.7V/60mA, 7000rpm±10%
リチウム電池	3.7V 750mAh
USB 口	Micro USB
充電電流	≤300mA
充電時間	≤3 時間
連続作業時間	≥1 時間
本体材質	ABS 樹脂 (表面メキ)

操作仕方



顔を水で洗淨する。



ヘッドを水で洗淨する。



乳液をヘッドに塗布する。



微振動によりターンオーバーを促進させ、気になるシミやしわにアプローチします。普段からお使いの化粧水やアイクリームの美容成分を肌の奥までしっかりと届けます。

注意事項

1. 高温になる場所に置かないでください。
2. けがや故障の原因になりますので、絶対に加熱や分解、改造などしないでください。
3. 本製品を水中に入れたり水滴がかからないようにしてください。故障の原因になります。
4. シンナー・ベンジン・ガソリン・灯油・アルコールなどは使用しないでください。変色、変形、破損の恐れがあります。

保証規定

お買い上げ日から保証期間中に、取扱説明書、本体ラベルなどの注意書に従った正常な使用状態で故障した場合には、本書記載内容に基づき、お買い上げ販売店が無料修理いたしますので商品と本保証書をご持参・ご提示の上、お買い上げ販売店にご依頼ください。

保証期間内でも次のような場合には有料修理となります。

- ・使用上の誤った、改造や不当修理による故障または破損。
- ・お買い上げ後の運送、落下などによる故障また

は破損。

・火災、地震、水害、落雷などの天災ならびに公害や異常電圧などの外部要因による故障また破損。

保証期限：お買い上げ日から1年間

お客様相談センター

TEL：048-299-9111

（受付時間：月～金 10：00～16：00
祝祭日および当社指定休日を除く）

NiCHOICE


**Cleansing Massager
NBT-910 User Manual**

**Thank you for using our product.
Please make sure that you read this manual
before using it.**

Precaution

1. Use with caution for sensitive skin user.
2. Do not use in wound.
3. Excessive care may cause side-effect to the skin, please adjust the using frequency according to your skin condition.
4. Make sure the product is cleaned each time before use, to prevent bacterial infection.
5. Always clean the product after use and store it in a ventilated place to dry up completely.
6. The product containing lithium polymer battery, please stay away from the fire source or high temperature environment.
7. Never attempt to disassemble the product, the product guarantee will be out of coverage of the loss from any failure or damage caused therefore.

Part list

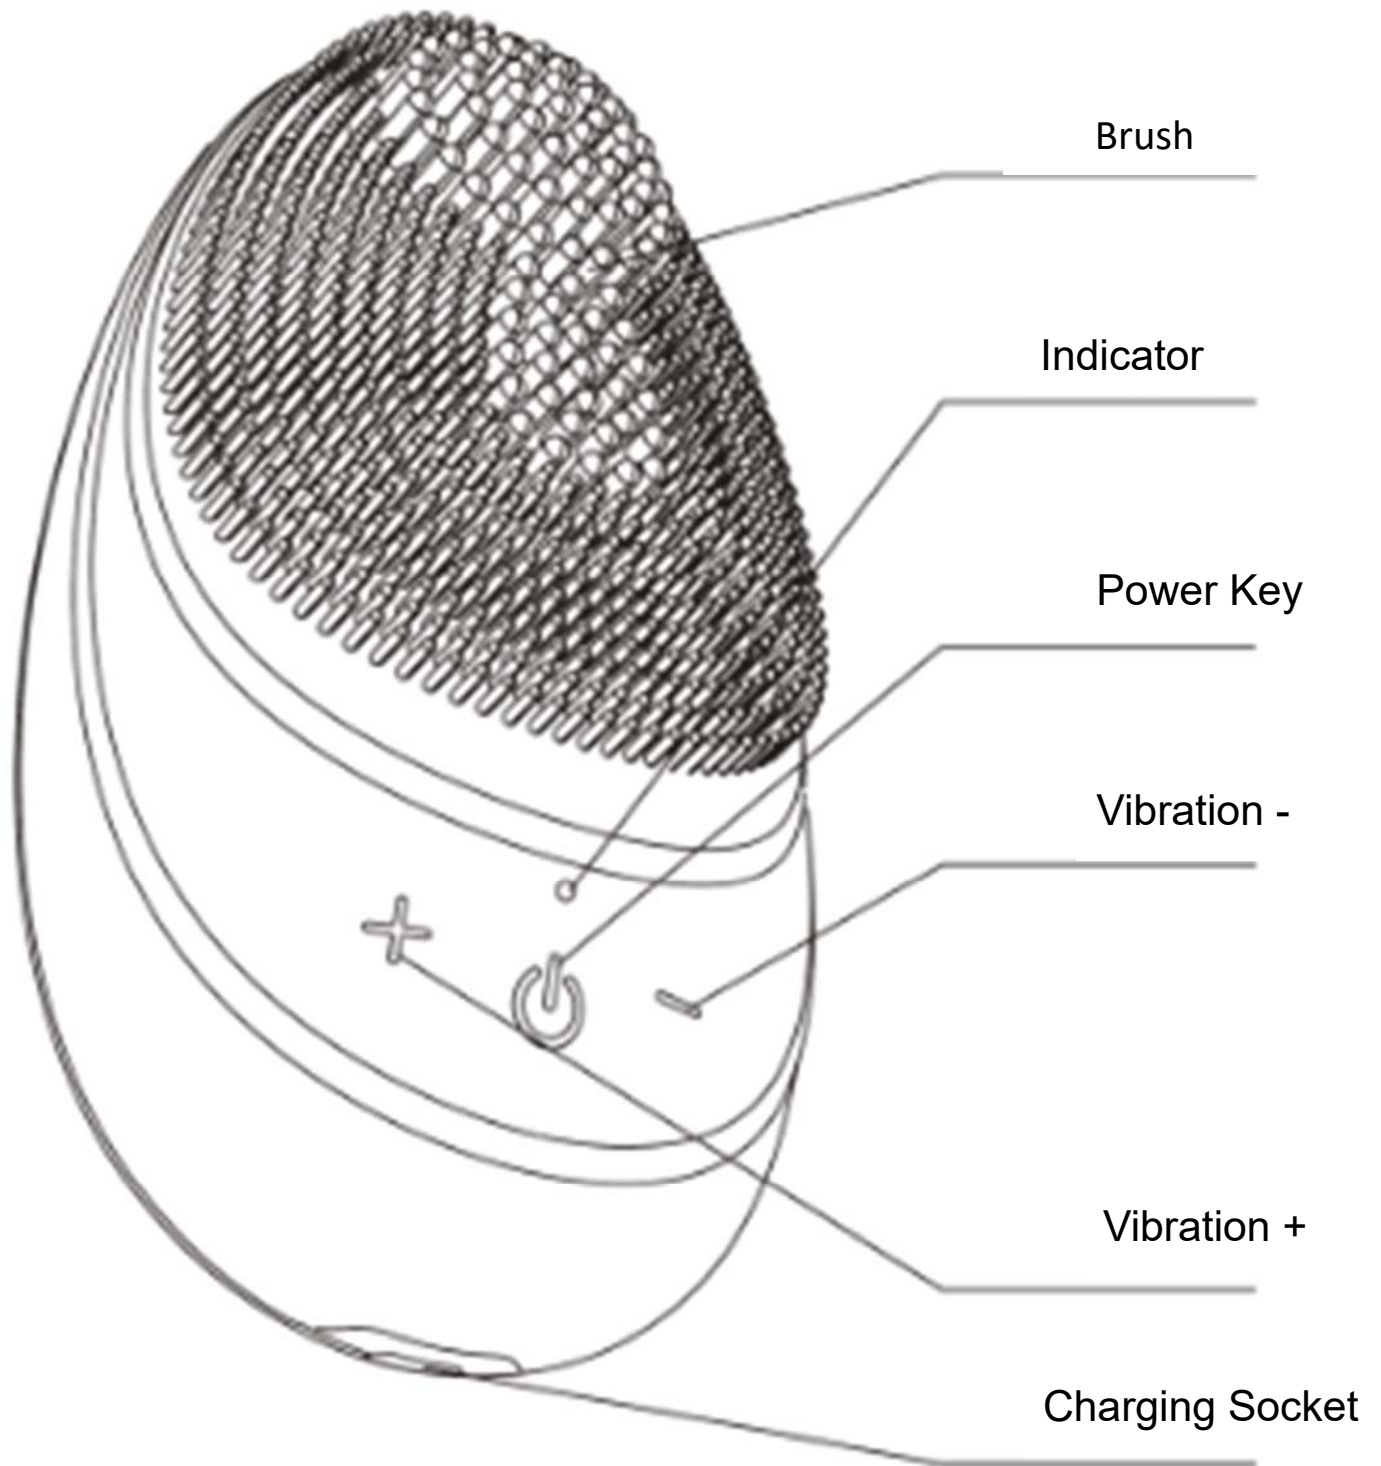

How to use

Power on: Press the power key shortly to power on, white LED indicator will be on and the product start to vibrate in middle speed.

Power off: While in power on condition, press the power key shortly to power off.

Vibration:

Vibration+: While in power on condition, short press + key to increase the vibration strength, totally 10 speeds between min vibration strength and max vibration strength. Keep pressing + key to skip to max vibration strength directly.

Vibration-: While in power on condition, short press - key to decrease the vibration strength, totally 10 speeds between min vibration strength and max vibration strength. Keep pressing - key to skip to min vibration strength directly.

Charging

Insert the micro USB plug into the socket of the product and connect the cable to the power supplier for charging.

* Please make sure that the product is fully charged on first use.

Product specification

Motor	3.7V/60mA, 7000rpm±10%
Battery Lithium-ion polymer	3.7V 750mAh
USB socket	Micro USB
Current of charging	330mA
Standard charging time	≤3hours
Standby current	≤5μA
Continuously working time	≥2H
Material	ABS (with coating)
Water resistance	IPX6

Operation guideline



Clean your face before using this product.



Clean the massage head.



Put lotions on the massage head.



The Vibration massage head to use with your facial cleanser to deep clean and gently exfoliate meanwhile gently removing calluses from elbows and feet. Rolling massage head to increase circulation and invigorate facial muscles.

Caution:

- 1.Keep the product away from the environment which is with high temperature, high humidity or magnetic field.**
- 2.Never try to heat, disassemble, or modify the product.**
- 3.Please always clean the product with wet towel, or the towel with neutral detergent in case the product is serious dirt.**
- 4.Never clean the product by using lacquers, volatile oil, petrol or alcohol which may cause the product fade, deformed or damaged.**

Warranties

NiCHOICE guarantees its products for a period of 1 year from the date of purchase against defect in material or workmanship, if any defect occurred to the product during 1 year warranty period and the product being normal usage according to this instruction manual, NiCHOICE will repair or replace (at its discretion) the product at its expense.This warranty extends only to the

original purchaser of the product.

To process your warranty claim, please send your name, address, phone number, copy of receipt as proof of purchase and send the product which should be safely packed to the closest retailer which is listed in this manual.

Warranty restrictions

- **Failure or damage caused by non-quality reason such as drop or other impact after purchase.**
- **Damage caused by misuse, abuse, neglect or alterations.**
- **The damage due to nature disasters such as fires, earthquake, lighting strikes and so on.**

Validity: One year since the day on purchasing

Information Center

TEL : 048-299-9111

Please enjoy our Customer Service during

Mon. ~ Fri. at 10 : 00am ~ 4 : 00pm